


# Wooden Blanks for Buttons

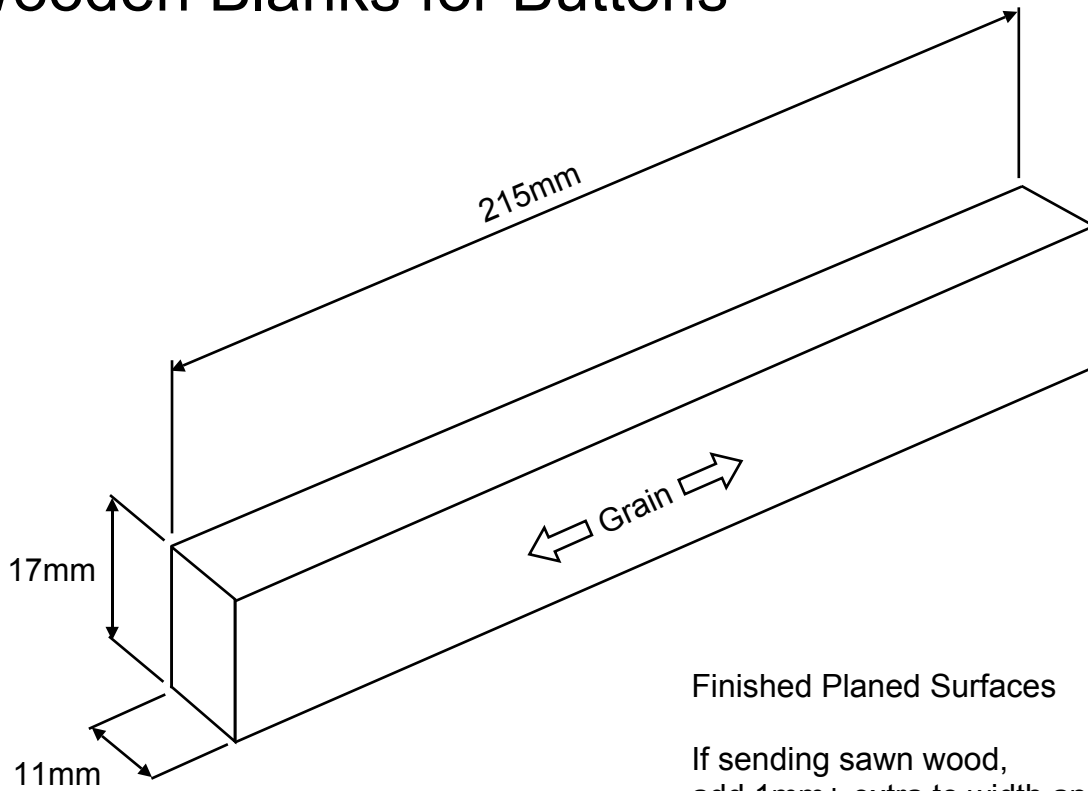

Finished Planed Surfaces

If sending sawn wood,  
add 1mm+ extra to width and height.  
Check for cracks.

Or 2 pieces:

